

Photodiode as current source

Student Group

First Name	Surname	Matrikel Nr.

Table of Contents

Photo Diode as current source 2

Photo Diode as current source



Fig. 1: Inverting Op-Amp: Photo Diode BPW 34 S



Fig. 2: Inverting Op-Amp: Diagramms of BPW 34 S

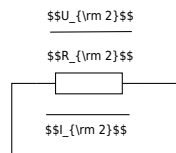


Fig. 3: Inverting Op-Amp: Photo Diode as current source

$$U_{DD} = 10\text{V}, U_{SS} = -10\text{V}$$

We assume a good illuminated room of 300 lx, illuminated by a white LED. White light is a mixture of many wavelengths across the visible spectrum, roughly 380 to 780 nm. For a typical white LED, the spectrum usually comes from a blue LED chip with a peak around 450 nm, plus a broader phosphor emission that spreads across green, yellow, and red wavelengths. For an easier calculation, we take a mean value of 500 nm which is close to the peak value of the blue LED (in reality a greenish light) and 300 lx for the illumination. In the diagram in figure 2 we see that the sensitivity of the photo diode at 500 nm ist only 30%. The maximim current (100%) at 300 lx is 30 μA . Now we can calculate the current we expect from the diode at 300 lx:

$$I_D = 30\ \mu\text{A} * 0.3$$

$$I_D \approx 10\ \mu\text{A}$$

30% of 30 μA is roughly 10 μA .

Complete the arrows in the scematic of the circuit. Calculate R_2 so that $U_{OUT} = 5\text{V}$ at 300 lx. Take a resistor from the E6 series that is as close as possible to the calculated value.

$$I_D = ?$$

I_{2}

U_{OUT}

U_{2}

R_{2}

What value would you expect for U_{D} and why?

U_{D}

$\{ \dots \}$

$\{ \dots \}$

$\{ \dots \}$

$\{ \dots \}$

$\{ \dots \}$

$\{ \dots \}$

What value would you expect for U_{D} when it is not connected to the Op-Amp or any other electronic part (open-circuit voltage) at 300 lx?

$U_{D_{\sim}}$

\dots

\dots

\dots

\dots

\dots

From: <https://mexle.te.hs-heilbronn.de/> - MEXLE Wiki

Permanent link: https://mexle.te.hs-heilbronn.de/lab05_en/inverting_op-amp_photo_diode_as_current_source?rev=1776675888

Last update: 2026/04/20 11:04

